



Montageanleitung

			 M6x35		
1-1 x1	1-2 x1	2-1 x1	2-2 x2	3-1 x2	3-2 x1
				 M16	
3-3 x1	3-4 x2	3-5 x3	3-6 x1	4-1 x2	4-2 x2
					 M6
4-3 x2	4-4 x2	4-5 x2	5-1 x6	5-2 x6	5-3 x6
					
5-4 x6	5-5 x6	5-6 x6			


1

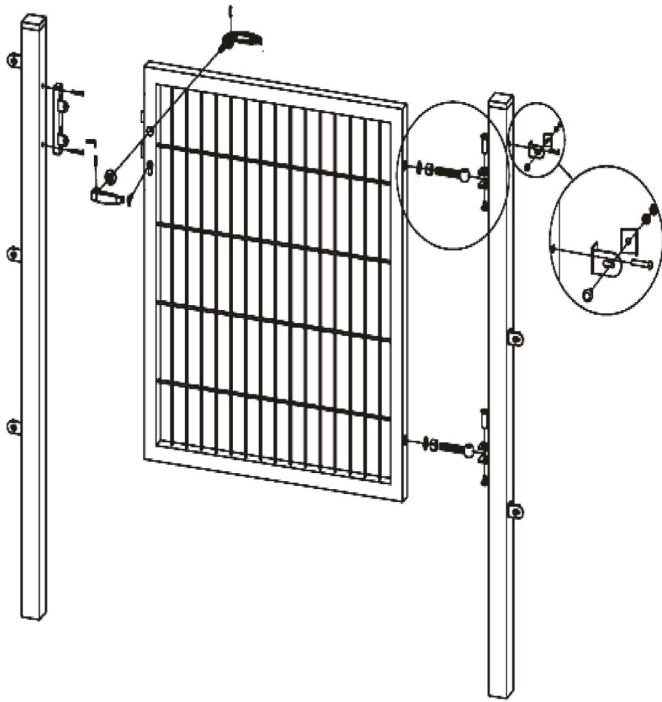


1-2

1-1

955mm-970mm

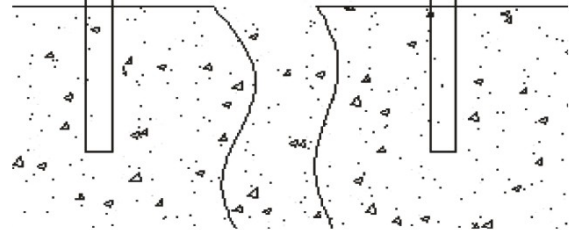

2

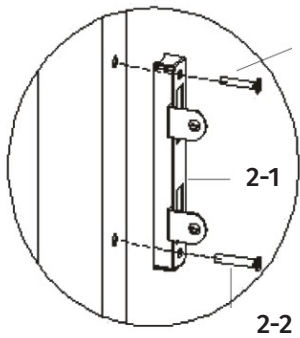


2-2

2-1

2-2

3

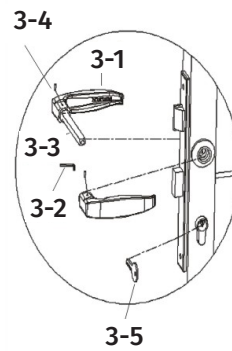

3-4


3-1

3-3

3-2

3-5




3-6

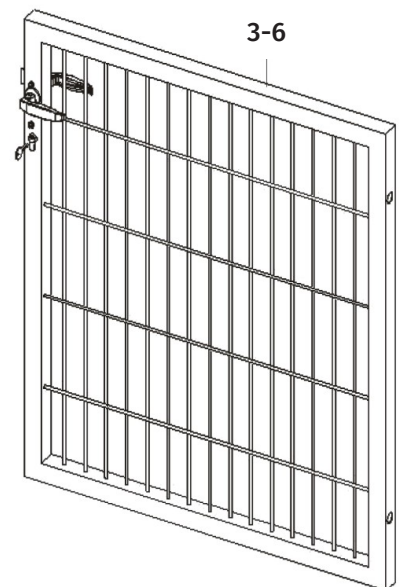

4

Wenn die Öffnungsrichtung der Tür geändert werden muss, gehen Sie bitte wie folgt vor.
Wenn nicht, können Sie diesen Schritt überspringen.

1.

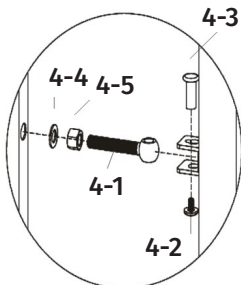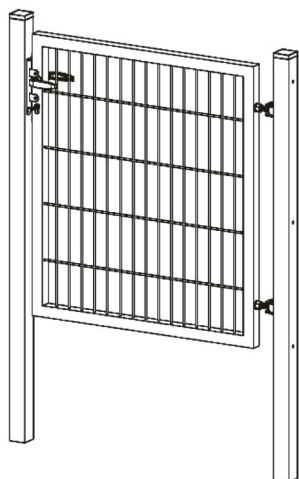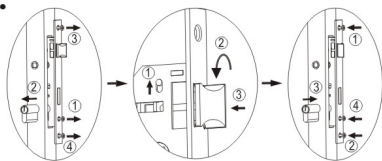

5

